
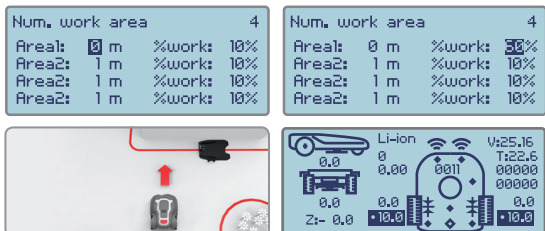




1.5 Rain Start Delay

Press **OK** first, when the number blinking, input the number of minutes from 0-180min. When it rains, the Landroid®M will return to the charging base to wait for the rain sensors to dry. When dry, the Landroid®M CPU will automatically begin the delay start countdown and then return to mowing. If the delay time is set as 0, Landroid will continue mowing.

2. Working time (L)

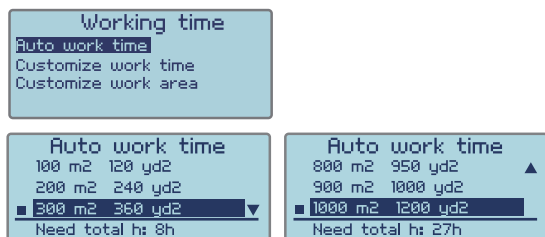

3. Security (L)

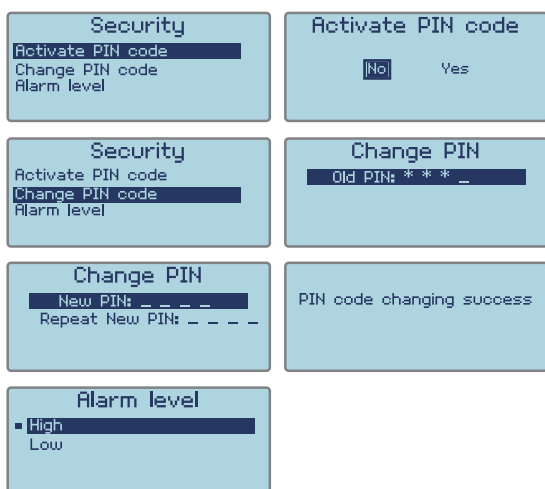

Auto work time, Customize work time can be set in this menu, use the **↑** **↓** keys to select then press **OK**.

You can press **START** to start your Landroid®M when Customize work time programming or Auto work time programming is complete.

2.1 Auto work time

Use the **↑** **↓** keys to select the lawn area. The working time will be automatically set according to the size of your garden. Then press **OK**.

Note: The Landroid®M can mow an area to 1000m².

Auto work time will display on the bottom of the display.

A "■" will appear in front of the option you selected.

You could find more details about default work time of Landroid®M in following table:

Landroid®M WG794E - Auto mowing time schedule.								
Area m ²	Auto mowing runtime - hours	Monday mowing hours	Tuesday mowing hours	Wednesday mowing hours	Thursday mowing hours	Friday mowing hours	Saturday mowing hours	Sunday mowing hours
100	3	7:00-8:30	/	/	7:00-8:30	/	/	/
200	7	7:00-8:24	7:00-8:24	7:00-8:24	7:00-8:24	7:00-8:24	/	/
300	8	7:00-8:36	7:00-8:36	7:00-8:36	7:00-8:36	7:00-8:36	/	/
400	11	7:00-9:12	7:00-9:12	7:00-9:12	7:00-9:12	7:00-9:12	/	/
500	13.5	7:00-9:42	7:00-9:42	7:00-9:42	7:00-9:42	7:00-9:42	/	/
600	16.5	7:00-10:18	7:00-10:18	7:00-10:18	7:00-10:18	7:00-10:18	/	/
700	19	7:00-10:48	7:00-10:48	7:00-10:48	7:00-10:48	7:00-10:48	/	/
800	21.6	7:00-11:18	7:00-11:18	7:00-11:18	7:00-11:18	7:00-11:18	/	/
900	24.3	7:00-11:54	7:00-11:54	7:00-11:54	7:00-11:54	7:00-11:54	/	/
1000	27	7:00-12:24	7:00-12:24	7:00-12:24	7:00-12:24	7:00-12:24	/	/

2.2 Customize work time

You can set schedule time from Monday to Sunday.

Press **OK** first, when the number is blinking, Input the start time and hours you want your Landroid®M to mow on a particular day.

If you do not want the Landroid®M to mow on a particular day simply confirm the hours 0.0h.

Working time adjustment

If you are still not satisfied with the time you set, there's a shortcut to adjust the working time. When the Landroid®M is in standby mode, use the **↑** **↓** keys to adjust the working time.

The overall working time will be adjusted in increment of 10% of the overall working time.

2.3 Customize work area

The Landroid®M may be programmed up to four different mowing zones.

You must set the distance from the charging station to each mowing zone. To determine the distance move the Landroid®M into the mowing zone, one meter away from back of the charging base, and press the **Home** button to set it. The Landroid®M will move along the boundary line, when it moves into the next mowing zone press the STOP button and press the **2** button to confirm the distance.

You may delegate the overall working time of the Landroid®M according to the size of each area. First press the OK button so the number will flash. Then use the up and down arrow buttons to select the correct time. Press the OK button to confirm.

Note: In order to successfully confirm the mowing times and areas your selections must be flashing.

Use the **↑** **↓** keys to select Activate PIN code, Change PIN code and Alarm level, then press **OK**.

3.1 Activate PIN code

Select Yes to activate the PIN code. If you don't want to activate the PIN code, just select No.

3.2 Change PIN code

Type the Old PIN (default PIN) 0000, then press **OK**. Then type your New PIN and repeat it.

3.3 Alarm level

Use the **↑** **↓** keys to select the alarm volume setting.

High = loud setting (60~70dB)

Low = quiet setting (40~50dB)

NOTE: If you input the wrong PIN code, the Landroid®M will be turned off automatically. Press On/Off key to On, input the right PIN code, then the Landroid®M will turn on again.

WARNING: If you decide to change the PIN code, be aware there's no way to restore the Landroid®M if you forget the PIN code. Please write your PIN code here and store this sheet in a safe place for future reference. Even better, register your Landroid®M online and enter your PIN code there. You will always be able to find your PIN online at www.worxlandroid.com.

Your PIN code